



INSTRUCTIONS

1. Inspect plug to make sure that rubber valve seals at the duck bill, that the rubber valve is securely seated inside plastic housing, and that there is a rubber O-ring under the octagon lip.
2. Apply Teflon tape to the threads of the plug to assure complete seal and to ease removal of plugs in the spring.
3. Remove eyeball fittings from return lines and install Winter Duck Plugs in all lines. Depending on the type of return fitting, assure that a seal is made either with the bottom of the valve portion against the inside lip of the return fitting, or with the O-ring against the face plate. Hand tighten.
4. Use a **BLOWER** hooked to the equipment end of the plumbing to blow out all lines.

NOTE: For proper clearing of all lines a BLOWER that delivers at least 100 CFM (cubic feet per minute) of air flow is required. A compressor will not provide adequate air flow to clear multiple lines.

NOTE: When used with a blower the Winter Duck Plug provides enough back pressure to allow 4 returns to be simultaneously cleared without burping or plugging lines. **Be Patient.** Allow the blower to do its work. You will normally see the closest line blow air first. Keep the blower running until all lines are blowing air.

NOTE: To speed the line clearing process, the duck bill valves of those lines already blowing air can be pinched with your fingers or with medium sized "Binder Clips" (available at office supply stores).

5. After all lines have been blowing air for several minutes turn off the blower. The Winter Duck Plug prevents water from getting back into the lines.

NOTE: It is strongly suggested that anti-freeze be added to the lines at this point and the blower turned on again until anti-freeze is seen being blown into the pool.


6. Install yellow safety caps by pushing in the center of the cap until it snaps into place. The back of a screwdriver handle works well for this.

NOTE: The yellow safety caps are not intended to hold back pressure when the blower is running. They are meant to protect the rubber valve from ice movement and to provide a second line of defense against water infiltration. They should not be installed until the blower is turned off.

LIMITED 1-YEAR WARRANTY

The Winter Duck Plug is warranted for one full year from date of purchase against defective materials or workmanship. Failure to follow instructions voids warranty. Warranty allows for replacement of defective item only when it is returned to Anderson Manufacturing Company with a copy of proof of purchase.

NO OTHER WARRANTIES. To the maximum extent permitted by law, Anderson Manufacturing Company, Inc. disclaims all other warranties and conditions, either express or implied. In no event shall Anderson Manufacturing Company Inc. be liable for any special, incidental, indirect, or consequential damages whatsoever arising out of the use of the Winter Duck Plug.

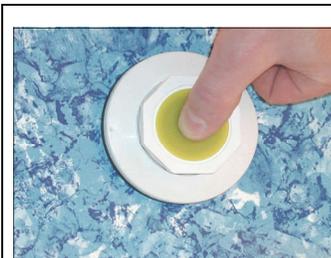

"Snap" caps into place by pressing the center with your thumb or the back of a screwdriver handle.

